
# **IX.SPECIFICATIONS**

| Model                 | WFX-360HW / WFX-360DS / WFX-3602G / WFX-360IX |  |
|-----------------------|---|--|
| Detection method      | Passive Infrared                              |  |
| Coverage              | ø25ft - ø40ft / (ø8m - ø12m)                  |  |
|                       | Height 8ft - 12ft / (2.4m - 3.6m)             |  |
| Detection zones       | 62 zones                                      |  |
| Sensitivity           | 3°F (1.6°C) at 2ft / sec (0.6m/sec)           |  |
| Detectable speed      | 1 - 5ft/sec. (0.3 - 1.5m/sec.)                |  |
| LED indicator         | Switch-able ON/OFF                            |  |
| Tamper switch         | Form C (micro switch)                         |  |
| Pulse Count           | Approx. 20 sec   2 or 4                       |  |
| Battery               | 1 x CR123A Lithium battery                    |  |
| Operating temperature | − 4°F - +122°F (−20°C - +50°C)                |  |
| Environment humidity  | Environment humidity 85% max.                 |  |

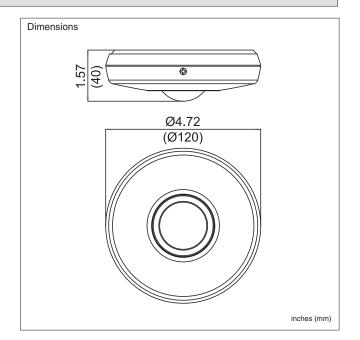

# Mounting Position Mounting Hole 0.18 (4.5)(04.5) Wall Tamper

\*Specifications and design are subject to change without prior notice.

## NOTE

This unit is designed to detect an intruder and activate an alarm control panel. Being only a part of a complete system, we cannot accept responsibility for any damages or other consequences resulting from an intrusion.

#### FCC ID

WFX-360HW/WFX-3602G: U5X-RE259 WFX-360DS: U5X-RE359 WFX-360IX: U5X-RE159

#### IC ID

WFX-360HW/WFX-3602G; 8310A-RE259 WFX-360DS: 8310A-RE359 WFX-360IX: 8310A-RE159

Install in accordance with the Standard for Installation and Classification of Burglar and Holdup Alarm Systems, UL 681.

#### FCC NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference that may be received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the Resolution Products, Inc. could void the user's authority to operate this equipment.

- This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

  (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- Le présent appareil est conforme aux cnr d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
- (1) L'appareil ne doit pas produire de brouillage, et (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

"Honeywell", "2GIG", "Interlogix", "DSC" are trademarks owned by Honeywell International, Inc, Nortek Security & Control LLC, United Technologies Corporation, and Tyco Safety Products Canada LTD, respectively.OP-TEX Inc. products will function with one of either Honeywell, 2GIG, Interlogix, or DSC systems. However, no OPTEX Inc. product is produced by, endorsed by, nor is officially associated with Honeywell, 2GIG, Interlogix, DSC.OPTEX Inc. recommends verifying proper enrollment and operation, per control panel installation instructions, at installa



URL: http://www.optex.net

OPTEX INC. (U.S.) URL: http://www.optexamerica.com

**OPTEX DO BRASIL LTDA. (Brazil)** URL: http://www.optex.net/br/es/sec

OPTEX (EUROPE) LTD. / EMEA HQ (U.K.)

URL: http://www.optex-europe.com

**OPTEX TECHNOLOGIES B.V. (The Netherlands)** 

URL: http://www.optex.eu

**OPTEX SECURITY SAS (France)** OPTEX KOREA CO.,LTD. (Korea) URL: http://www.optex-security.com URL: http://www.optexkorea.com

OPTEX SECURITY Sp.z o.o. (Poland) OPTEX (DONGGUAN) CO.,LTD. SHANGHAI OFFICE (China) URL: http://www.optex.com.pl URL: http://www.optexchina.com **OPTEX PINNACLE INDIA, PVT., LTD. (India)** 

OPTEX (Thailand) CO., LTD. (Thailand) URL: http://www.optex.net/th/th



11/15/2017 59-2713-0

# **INSTALLATION INSTRUCTIONS**

# PASSIVE INFRARED DETECTOR

WFX-360HW/WFX-360DS WFX-3602G/WFX-360IX

# **FEATURES**

- Ceiling Mount Type 360°PIR Detector.
- O Selectable pulse count 2 or 4.

| Honeywell 5800 Series Compatible        |
|---|
| DSC 433MHz Compatible                   |
| 2GIG Compatible                         |
| Interlogix 319.5MHz & QOLSYS Compatible |
|   |


\*Product is not produced by, endorsed by, nor is officially associated with Honeywell, DSC, 2GIG, Interlogix, or QOLSYS.

# I. INSTALLATION HINTS



The nix  $\bigcirc$  sign indicates prohibition. Le signe non  $\bigcirc$  indique une interdiction.

# **II. DETECTION AREA**

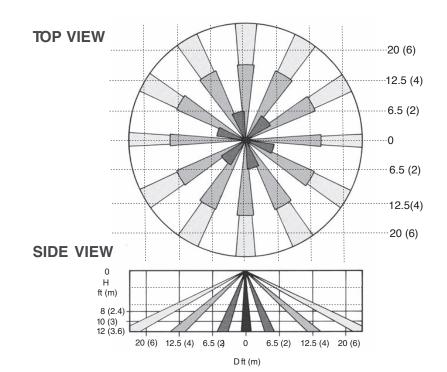


# MAX. Detection AREA


| Installation<br>Height<br>ft (m)          | 8<br>(2.4) | 10<br>(3)  | 12<br>(3.6) |
|---|------------|------------|-------------|
| Detection<br>Area<br>(Diameter)<br>ft (m) | 25<br>(8)  | 32<br>(10) | 40<br>(12)  |

Copyright (C) 2016 OPTEX CO.,LTD.

URL: http://www.optex.net/in/en/sec

# **III. DESCRIPTION AND OPERATION**

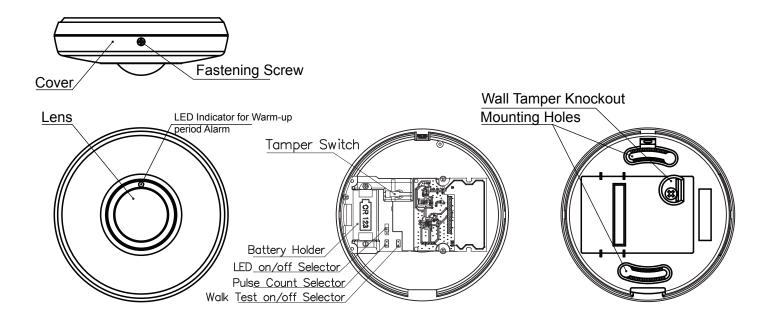

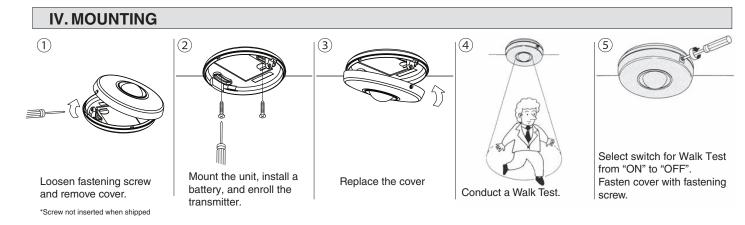

# **V. ENROLLING TO CONTROL PANEL**

#### Interlogix:

#### Programming/Enrolling

- Place control panel into enrollment mode
- Remove battery tab to automatically send entire RF enrollment sequence, or
- Open cover to send Tamper Signal

#### QOLSYS:

#### Programming/Enrolling

- Place control panel into enrollment mode.
- Remove battery tab to automatically send entire RF enrollment sequence, or
- Open cover to send Tamper Signal

#### Honeywell:

### Programming/Enrolling

- Enroll by placing the panel into wireless enrollment mode
- Remove battery tab while holding Tamper to automatically send entire RF enrollment sequence, or
- Trip (alarm or tamper) 3 times, or
- Enter the sensors ID number

#### **Enrollment Tips**

- Program as an RF type (Supervised RF)
- Program as Loop 1
- Loop 4 = Tamper

# 2GIG:

#### Programming/Enrolling

- Place control panel into enrollment mode
- Remove battery tab while holding tamper to automatically send entire RF enrollment sequence, or
- Trip (alarm or tamper) 3 times, or
- Enter the sensors ID number

# Enrollment Tips

- Confirm Loop 1 is selected
- Power down the PIR after enrollment to keep panel from mistakenly double enrolling the sensor.

#### DSC:

### Programming/Enrolling

- Place control panel into enrollment mode
- Remove battery tab to automatically send entire RF enrollment sequence,
- Open cover to send Tamper Signal, or
- Enter the sensors ID number

# Cryptix:

# Programming/Enrolling

- Place control panel into enrollment mode
- Remove battery tab to automatically send entire RF enrollment sequence,
   or
- Open cover to send Tamper Signal, or
- Enter the sensors ID number

# **VI. FUNCTIONS**

#### 1. LED ON / OFF

The Alarm LED indicator can be switched either "ON" or "OFF".

## 2. PULSE COUNT

The Detection Mode can be switched to either "2" or "4" depending on the environmental conditions of installation.

- 2: For normal applications.
- 4: For use in hostile areas where there may be movement of small animals or other objects such as fax machines or curtains.

When "4" is selected, the detector's sensitivity may seem sluggish. Conduct a Walk Test to ensure that the desired coverage is given.

# 3. WALK TEST SWITCH WALK TEST


- 1) LED lights up when the unit has detected.
- 2) An alarm signal is output when detected.


#### **NORMAL: Normal Operation (Battery Saving Mode)**

1) LED lights up when the unit has detected if "LED ON" is selected.

2) Once alarm is generated, another alarm will not generate for 2 minutes.

ON OFF (Factory setting)

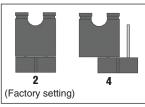

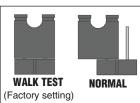

# **VII. TROUBLE SHOOTING AND MAINTENANCE**

| PROBLEM   | PROBABLE CAUSE  | REMEDY  |
|---|---|---|
| Alarm is not activated                          | Detection area is improper.   | Conduct a walk test. See Section II.                                      |
| although someone is walking in detection        | Battery is dead.  | Change battery.   |
| area.   | Walk Test switch is OFF.  | Turn the Walk Test switch on. See Section VI.                             |
| Unintended activation<br>(False Alarm)          | Moving object within detection area. (curtain, wall hanging, etc.)                      | Remove the object from the detection area.                                |
|   | Temperature of object within area is changing rapidly. (heater, air conditioning, etc.) | Remove the heat sources from the detection area or relocate the detector. |
| LED does not light up at the time of walk test. | Walk Test switch is OFF.  | Turn the Walk Test switch on.   |
|   | Battery is dead.  | Change battery.   |

<sup>\*</sup>Conduct a walk test at least once per year.

## VIII. BATTERY LIFE

The values indicated are only for reference on each condition. The sensor will send low battery transmissions to the control panel.

CR123A (3V, 1300mAh)

| Alarm trigger per day | Battery Life    |
|-----------------------|-----------------|
| 240                   | Approx. 7 years |
| 720                   | Approx. 3 years |

- 3 -